



CUSHIONED GRIP
Eases user fatigue

32 oz SOLUTION TANK
Detaches for easy refilling

GEN992 - Victory Sprayer Kit
Contains: Rugged carry case
Battery charger
Nozzle Wrench

16.8 v LITHIUM ION BATTERY
4 hour run time
1 hour recharge time



SOLUTION TANK LOCK
Non-slip wheel seals and releases with a simple twist

LIGHT
Ensures thorough application in low-light settings

3-IN-1 NOZZLE
Rotates to adjust droplet size and change the shape of the spray pattern

THE WRAP-AROUND EFFECT

Each disinfectant droplet is positively (+) charged as it passes through the electrode and exits the nozzle.

An electromagnetic attraction then draws the (+) charged particles into contact with the (-) charged surfaces being treated.

Even after spraying stops, the disinfectant droplets continue to migrate to areas not initially wetted, quickly and efficiently disinfecting the entire surface. No hand wiping is required. Allow to air dry.



VitalOxide
Quat-free/No Bleach/RTU

VIROTAB
Effervescent Disinfectant Tablet

VICTORY INNOVATIONS
No-touch Electrostatic Application

UV MONITORING
Quantifiable Real World Testing


UV/FLUORESCENT MARKING

Meets CDC EVS Protocol Compliance Standards

In its effort to lower the incidence of HAIs (Hospital Acquired Infections) in acute care facilities, the CDC requires verification that its protocols for environmental cleaning are being followed. Fluorescent marking has proven to be one of the most trusted testing methods available.

Simply apply the invisible fluorescent powder (or gel) to the non-porous surfaces and contact points you wish to monitor. After cleaning occurs, examine the space using an Ultra Violet lamp. Areas missed or cleaned incompletely will become visible instantly.

Your Genesan distributor representative would be happy to recommend a fluorescent marking kit to meet your needs.

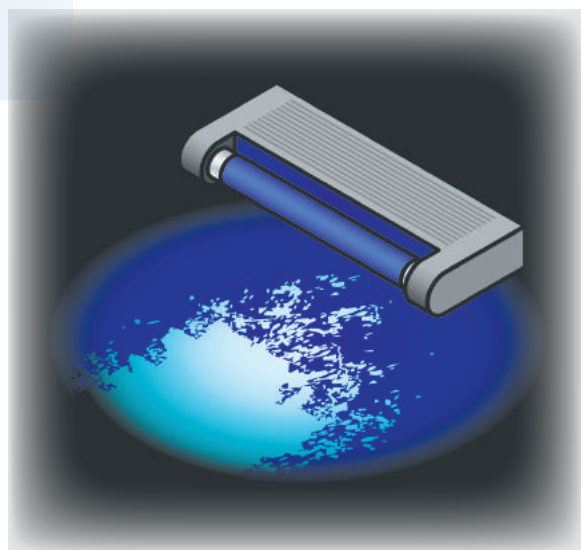

KILLS C.diff IN JUST 4 MINUTES

BLEACH FREE/NON-QUATERNARY

Active ingredient sodium troclosene dissolves in water to become the powerful hypochlorous acid (HOCL)

STABLE

Remains active for 7 days in a closed container
Remains active for 24 hours in an open container

BROAD SPECTRUM

- Clostridium difficile ● Influenza H1N1 ● HIV-1
- Hepatitis A & B ● Norovirus ● MRSA ● Herpes
- Numerous other pathogens/viruses/molds

SAFE ON ALL SURFACES

Low pH (6.0) will not damage floor finishes or clothing

READY-TO-USE OXIDIZING DISINFECTANT CLEANER & FOOD CONTACT SANITIZER



GEN993 - 4/1 Gallon/Case
GEN1007 - 2.5 Gallon Bag-in-a-Box

SANITIZER (Dilute at 1:9)

60 second contact - 99.999% elimination of e coli, salmonella, listeria and more

SHELF LIFE

One year or more if unopened

DISINFECTION (Do not dilute)

Hospital Grade/Broad Spectrum

- Swine Influenza ● Hepatitis A, B, C
- Rotavirus ● Norovirus and more

SAFE TO USE

Non-irritant/Non-corrosive/Non-quaternary
HMIS Triple Zero rating
Food Contact & Pet Safe
Spray Bottle/Mop or Electrostatic Sprayer

GEN1112
Case: 2-120/tablet Tubs (240 tablets)



- Tablet Size: 6.55 grams
- Removes Mold & Mildew Stains
- Dissolves in 2 Minutes
- Application: Spray Bottle
Wet Mop
Electrostatic Sprayer

DILUTION GUIDE	
General Disinfection	<p>10 Minute Contact Time</p>
Cdiff Disinfection *	<p>4 Minute Contact Time</p>

*For electrostatic application, dilute two tablets in sprayer tank

Disinfect Anytime... Anywhere

VitalOxide and VIROTAB may be used to safely disinfect/sanitize all types of surfaces, both hard and soft. Electrostatic application frees you to thoroughly disinfect those remote and hard-to-reach areas that normally might go untreated.



hospitals nursing homes ambulances privacy curtains wheelchairs fitness centers locker rooms school buses stadium restrooms theaters